



# DIY

## WARDROBE & SHOWER SCREENS

www.eziguide.com.au    ph: (08) 8285 6666

### DO IT YOUR SELF MEASURING GUIDE - EXAMPLE ONLY

Measure the total width of the wall in three different places

1a at floor level, 1b at ceiling level, 1c at mid level



The three measurements will probably be slightly different

Measure from floor to ceiling in three different places

2a left corner, 2b right corner, 2c middle

The three measurements will probably be slightly different

Note we will be using ... the smallest measurement of the three when we make your wardrobe.

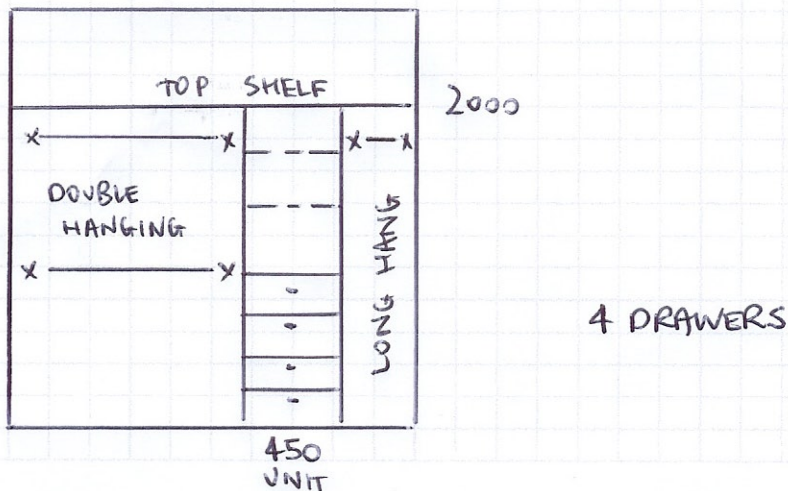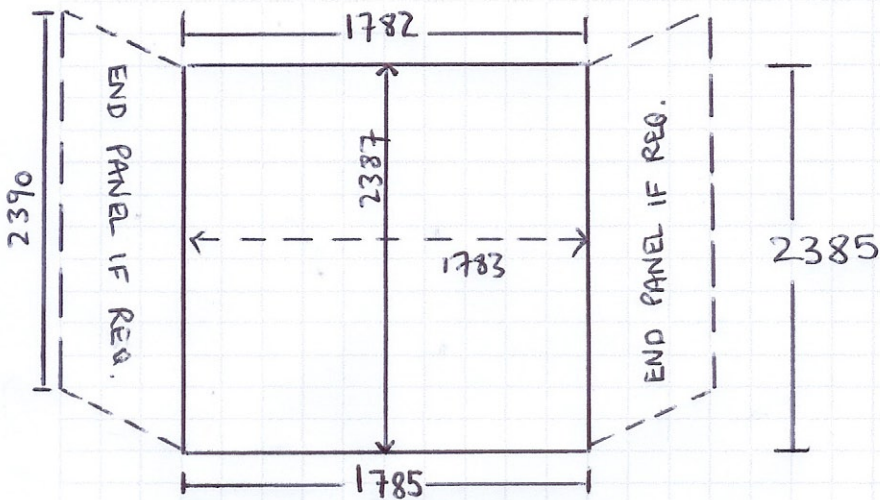

See examples for how to complete this form and fax or email it with your order.

Name: \_\_\_\_\_

Contact Phone Number: \_\_\_\_\_